



# Sony Ericsson W300i Main Screen Replacement

A torx 6 screwdriver and a pry tool is all you need to replace a damaged screen on your W300i. This task will take around fifteen minutes.

Written By: Michael Faist



## INTRODUCTION

This guide presents how to replace the Sony Ericsson W300i main screen. Screen replacement may be necessary if the phone screen has been damaged or is not functioning.

---



### TOOLS:

- [T6 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Main Screen



- Here is the phone in question: The Sony Ericsson W300i.
- To access the interior of the phone, you need the a plastic opening tool, and a T6 Torx screwdriver.

## Step 2



- Before removing the screen, you must first remove the battery.
- Remove the battery cover by applying pressure while sliding the base cover away from the phone and then lifting the cover up.



## Step 3



- Using your fingers, lift the end of the battery up and then pry the battery from the phone base.

☛ During reassembly you must reinsert the battery so the gold markings are at the top of the battery.

## Step 4



ⓘ This step may take a few minutes.

- Remove the front plate off the phone with a plastic opening tool to gain access to the screws beneath.

- Use the point indicated on the photo as a good prying point.

ⓘ Use a moderate amount of force.

⚠ Be aware of the sharp edges of the prying tool.

## Step 5



- Use the T6 Torx screwdriver to remove the four screws.

⚠ Place screws in a safe location to avoid losing them.

## Step 6



**i** This step may take a few minutes.


- Use a plastic opening tool to separate the screen cover from the top half of the phone.
- Slide the corner of the opening tool along the side of the phone toward the bottom corner.
- With the phone screen facing away from you, press into the screen crevice at an angle so that the tool pushes away towards the main screen.

**i** Use a moderate amount of force.

**!** Be aware of the sharp edges of the prying tool.

- Once the seal has been broken, tug the cover away.

## Step 7

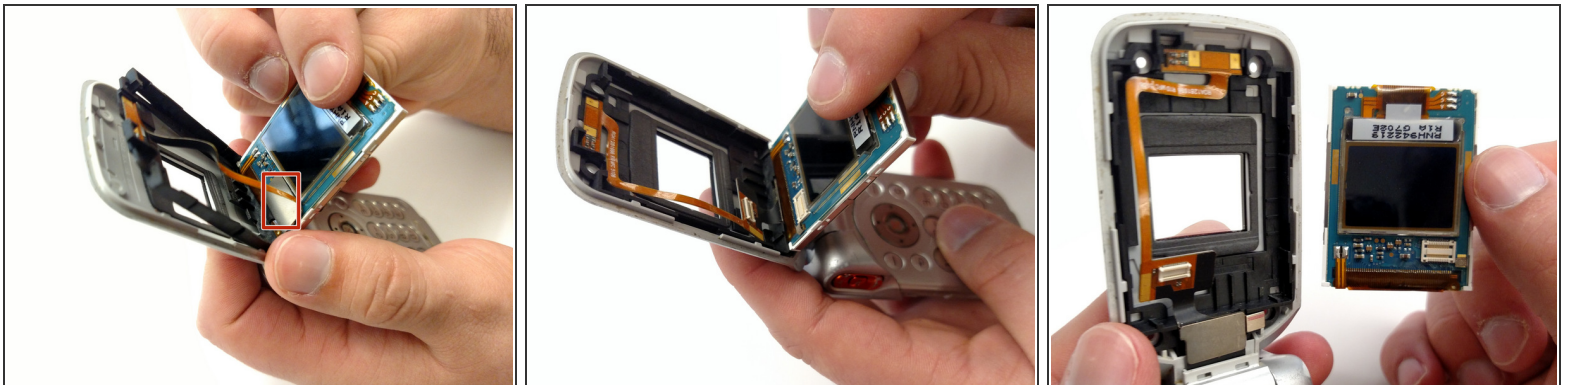

- Use your fingers to pry the plug end of the orange ribbon cable away from the screen.
- Remove screen.



## Step 8



- Using the new screen, reattach the plug end of the orange ribbon cable.
- Push new screen into the phone.

Reassemble the phone following the steps in reverse.

This document was last generated on 2017-07-11 12:39:14 PM.